



MICOM SW800

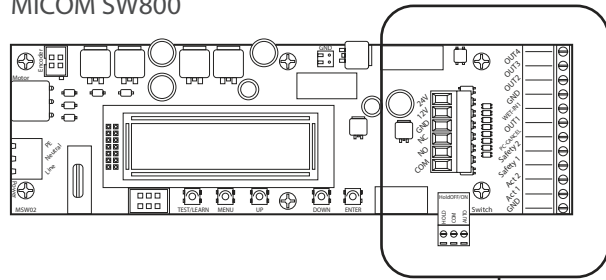


HTB-09

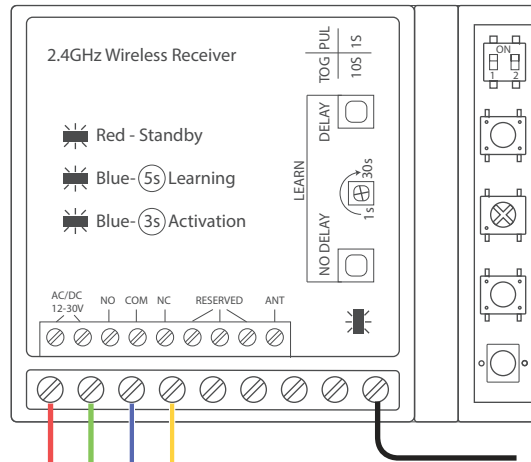

Note:

Antenna wire has to be extended outside of the header with the edge of the wire stripped 1cm. Press and release NO DELAY, for normal instant activation.

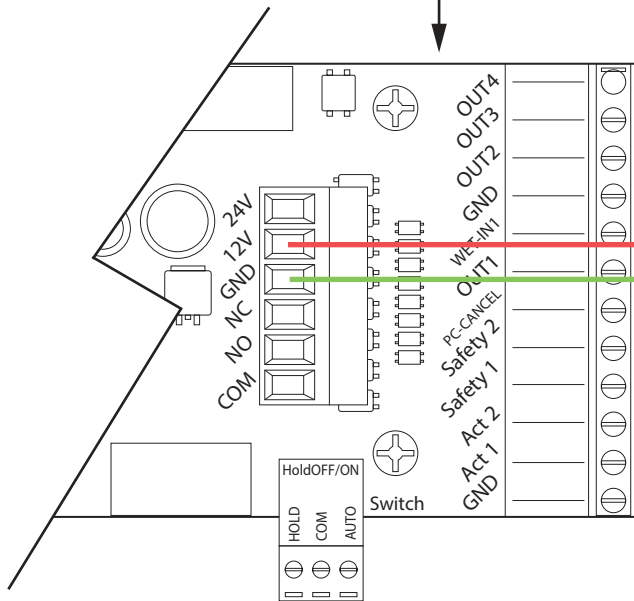

CONNECTION SCHEDULE

	HTB-09 (TERMINALS/WIRE)	MICOM SW800 (TERMINALS)
+	Positive 12/30 VDC	12V (Power Terminal)
-	Negative 12/30 VDC	GND (Power Terminal)
NO	Switch Terminal	ACT1 (Connection Terminal)
COM	Switch Terminal	GND (Connection Terminal)
ANT	Antenna	—

TITLE:

MICOM SW800 with HTB-09

PART NO:

DATE:

MAY 2023

SCALE:

NONE

DRAWN BY:

SC/GDA

VERSION:

DIAGRAM 18

SHEET:

1 of 1