

IN THE EVENT OF AN EMERGENCY
PUSH EMERGENCY BUTTON
AN AUDIBLE AND VISUAL SIGNAL
WILL ACTIVATE
PULL TO RESET



PUSH FOR ASSISTANCE
PULL TO RESET
MOUNTED @1100 AFF

INSIDE WAVE TO
OPEN BOTTON
MOUNTED @1100
AFF

INSIDE WAVE TO
LOCK BOTTON
MOUNTED @1100
AFF

AUTOMATIC DOOR
OPERATOR


INSIDE DOME LIGHT
WITH SOUNDER

UNIVERSAL WASHROOM

Approach **HAND** to open
GREEN = Vacant RED = Occupied




WAIT FOR DOOR TO CLOSE
USE 'WAVE TO LOCK' SWITCH
TO LOCK DOOR

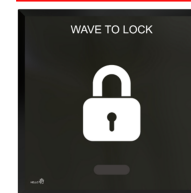

OUTSIDE WAVE TO
OPEN BOTTON
MOUNTED @1100
AFF

FAIL-SAFE ELECTRIC
STRIKE

OUTSIDE DOME
LIGHT WITH
SOUNDER

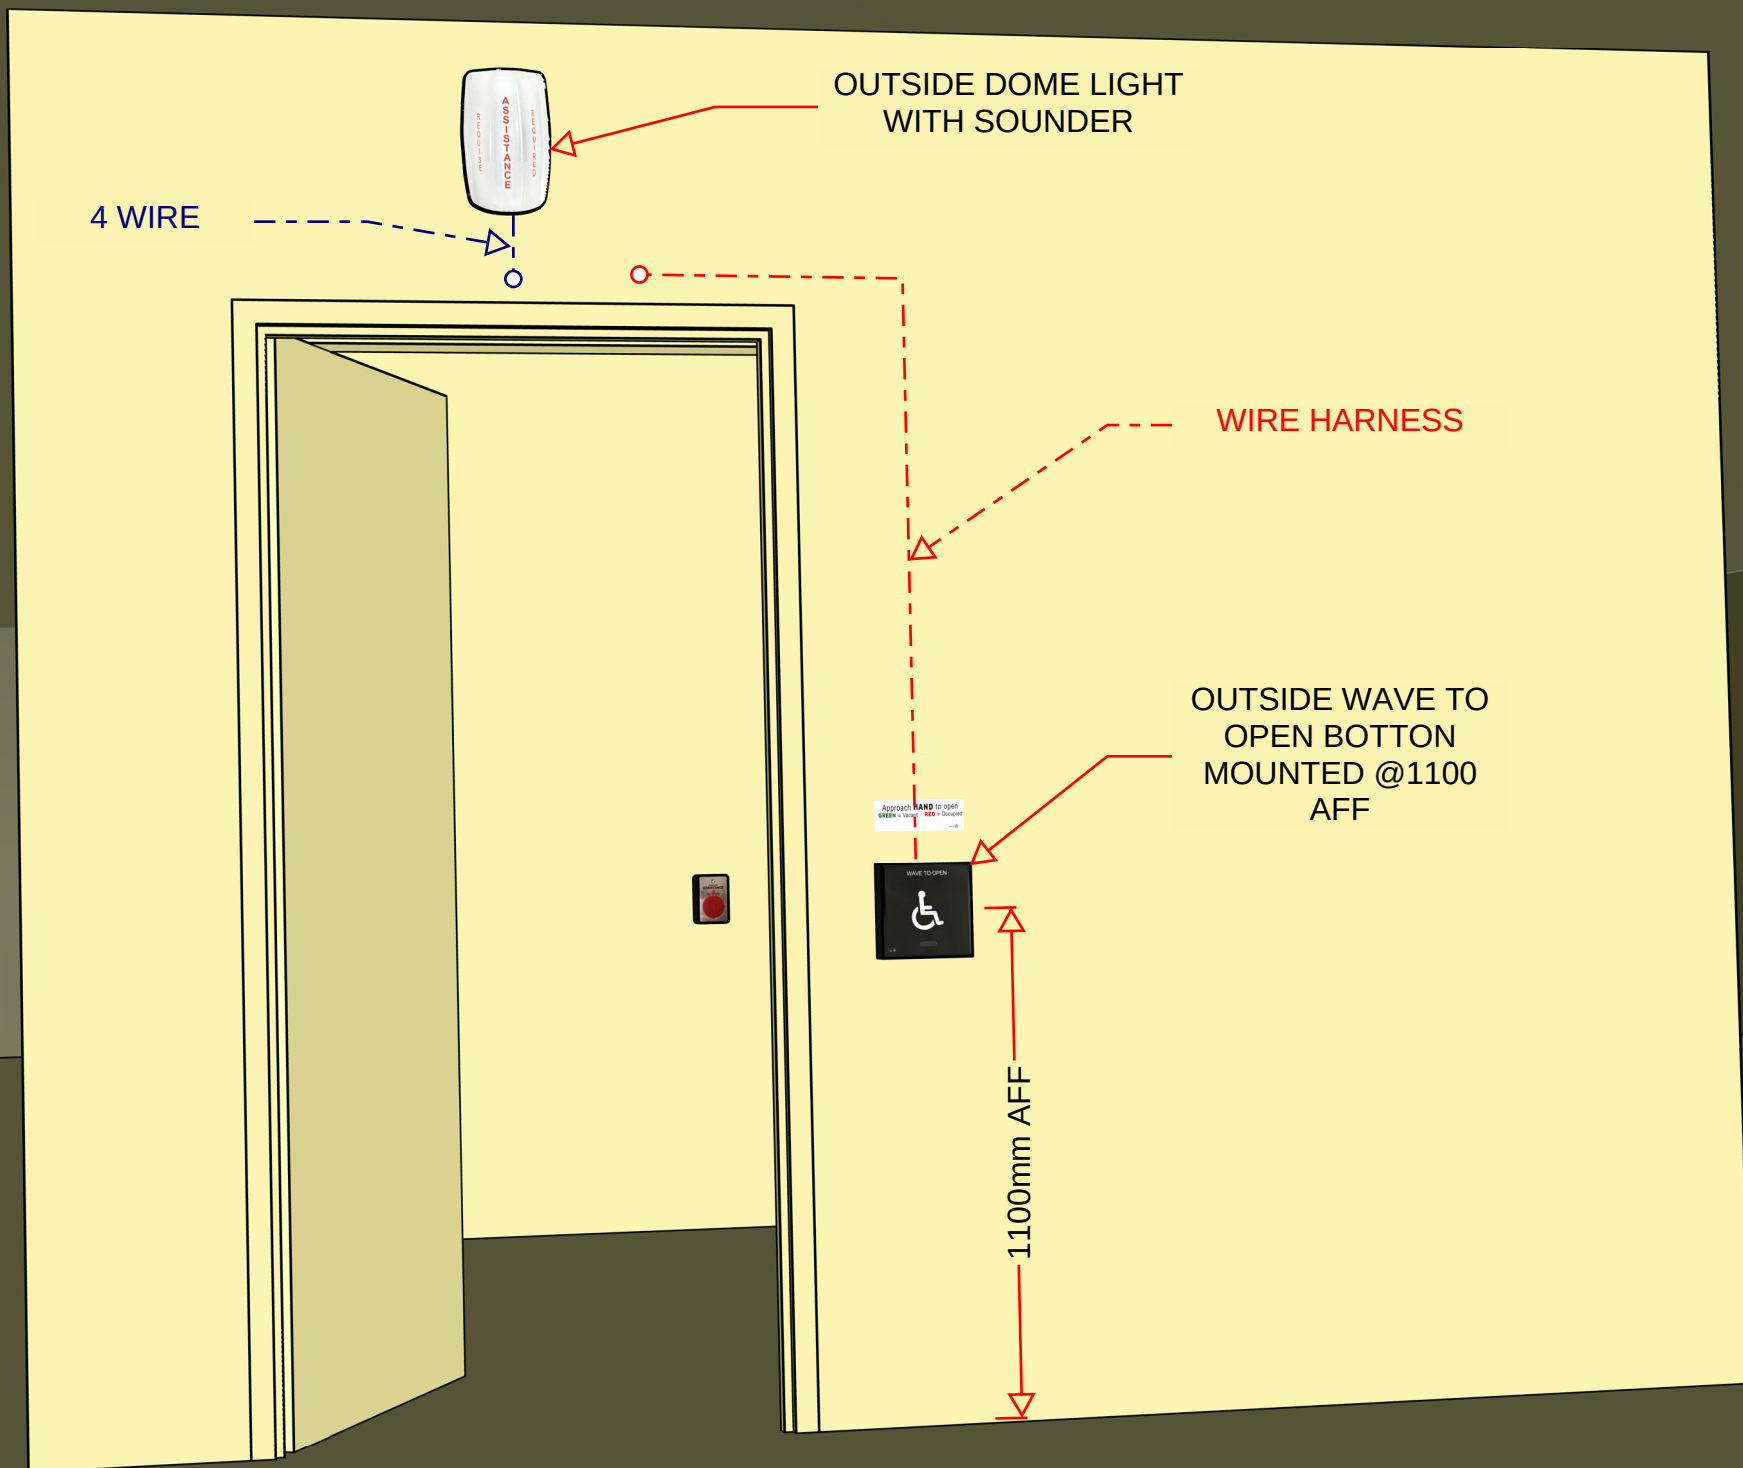

120 VAC REQUIRED

4 WIRE

INSIDE DOME LIGHT
WITH SOUNDER

WIRE
HARNESS

AUTOMATIC DOOR
OPERATOR

INSIDE WAVE TO
LOCK BOTTOM
MOUNTED @1100 AFF

Approach **HAND** to open
GREEN = Vacant RED = Occupied

Approach **HAND** to open
GREEN = Vacant RED = Occupied

FAIL-SAFE ELECTRIC
STRIKE

INSIDE WAVE TO
OPEN BOTTOM
MOUNTED @1100 AFF

